


# LS1 Remote Filter Adapter

Adapter installs under pan rail,  
o-rings facing pan, threaded ports facing down

Underside of Adapter Shown,  
1-1/16 -12 O-Ring fittings install in female  
threads on underside of adapter.

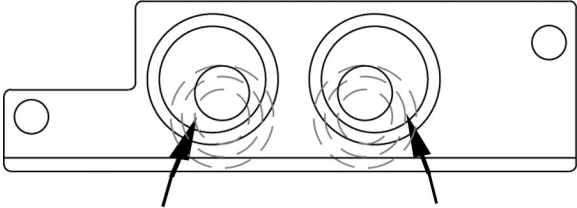

**Oil Exit Port**

**Return Port**

**(Oil Going out to Filter)**

**(Oil Returning from Filter)**

