




232 Branford Rd.  
North Branford, CT 06471  
Orders: 203.481.9460  
Tech: 203.481.9943  
Fax: 203.481.9641

## Product Instructions

### Part # 22-550 and 22-560 Chevy Oil Input Sandwich Adapters

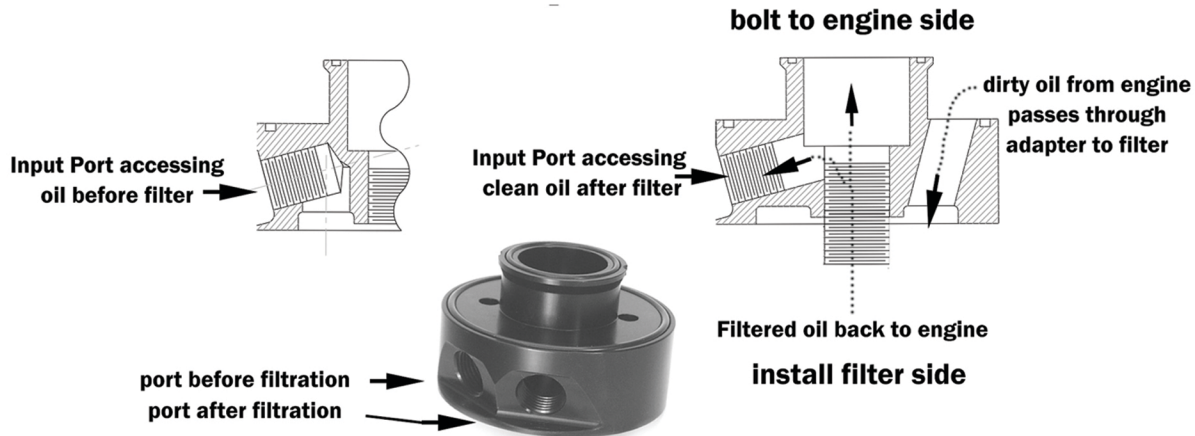

1. Remove Adapter contents and confirm quantities.
  - a) (1) Oil Adapter (SBC or BBC)
  - b) (2) O-rings installed on Adapter
  - c) (2) 5-16"-18 x 2-1/4" (SBC) or (2) 5/16"-18 x 2-3/4" (BBC)



2. Take Adapter assembly and install adapter with O-rings into the oil filter mounting cavity.
3. Take the (2) supplied bolts and start them by hand, then with an 1/4" allen wrench tighten down each bolt equally.

Port after filtration Port before filtration

