




**232 Branford Rd.  
North Branford, CT 06471  
Orders: 203-481-9460  
Tech: 203-481-9943  
Fax: 203-481-9641**

## **Fuel Filter Installation Instructions**

### **25-902 CM-15 EFI INLINE FUEL FILTER 06+ FORD MUSTANG OE FITTINGS**

**\*\*NOTE:** This filter is designed to use the stock clamp and fittings.

- 1) Before beginning remove the fuel pump relay and negative terminal battery connection.
- 2) Locate the plastic fuel filter housing cover underneath the drivers side of the car.
- 3) Remove the 10mm bolts holding the housing on and pry off the plastic caps carefully.
- 4) Be ready to catch any fuel that spills out when removing the fuel lines.
- 5) Remove the fuel lines connected to both sides of the fuel filter by pressing the tabs and pulling the lines off. A fuel filter line disconnect tool can ease this process.
- 6) Remove the bolt that tightens the fuel filter clamp to release the filter and slide out the old filter.
- 7) Slide the Canton 25-902 into the clamp taking note that the arrow should go towards the engine. SEE ILLUSTRATION.
- 8) Tighten clamp and Re-Install fuel lines. NOTE: You should hear a snap when the fuel lines are secure.
- 9) Re-connect fuel pump relay and re-connect negative battery terminal connection
- 10) Start your vehicle and check for leaks. If no leaks are found re-install the fuel filter housing cover.

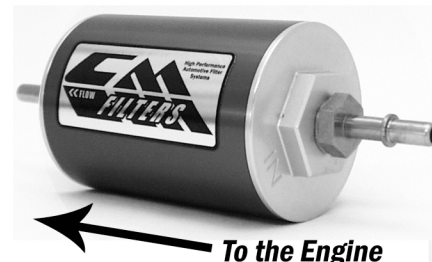

**\*\*NOTE** This canister features a replaceable element. To replace element follow directions listed above to remove filter. Then use a wrench to remove one cap. Replace the element and install as before. The fuel filter element part number is #26-600