





232 Branford Rd.
North Branford, CT 06471
Orders: 203.481.9460
Tech: 203.481.9943
Fax: 203.481.9641

Product Instructions

#22-632 CHEVY LS1 REMOTE FILTER ADAPTER

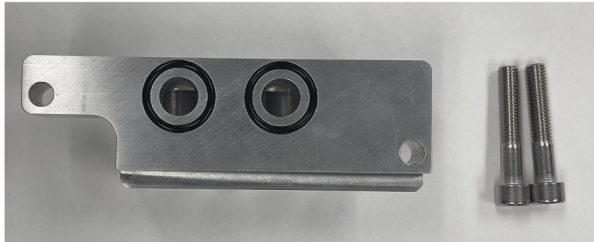

Underside of Adapter Shown,
1-1/16 -12 O-Ring fittings install in female
threads on underside of adapter.

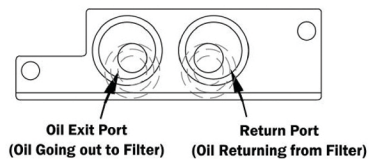

1. Remove Adapter contents and make sure all parts included,
 - a. LS1 Adapter
 - b. (2) 8mm x 45mm bolt
 - c. 2 O-rings installed on Adapter
2. Take Adapter with two O-rings installed and fit to the oil pan, as seen below

22-632



22-630



3. Take the two 8mm bolts and hand start each bolt.
4. Then using a 6mm allen wrench tool, tighten down each bolt equally, taking care not to strip your threads,
5. If you are using a Allen bit socket, torque to 18 ft/lb.